

UHF CB radios operate on the following standard 40 channels:

Citizens Band (CB) Radio 477 Mhz UHF

1	476.425	11	476.675	21	476.925	31	477.175
2	476.450	12	476.700	22	476.950	32	477.200
3	476.475	13	476.725	23	476.975	33	477.225
4	476.500	14	476.750	24	477.000	34	477.250
5	476.525	15	476.775	25	477.025	35	477.275
6	476.550	16	476.800	26	477.050	36	477.300
7	476.575	17	476.825	27	477.075	37	477.325
8	476.600	18	476.850	28	477.100	38	477.350
9	476.625	19	476.875	29	477.125	39	477.375
10	476.650	20	476.900	30	477.150	40	477.400

Note: Some channels are for special uses.

Channel 5	Emergency Channel
Channel 11	Call Channel
Channel 40	Road Channel

Repeaters transmit between channels 1-8 and receive between channels 31 and 38. Avoid these channels for non-repeater (simplex) communications. Repeaters operating on **Channel 5/35 may be used for emergency communication only.** If you have 'line of sight' communication, you should move from the repeater to a simplex channel to leave the repeater channel free for others who cannot communicate direct.

Channels 22 and 23 are used for telemetry and remote control purposed. Voice communications on these channels is not allowed.

Channel 11 is the call channel, most people use repeaters for this purpose instead. Many truck drivers use Channel 40.

These channels are recommended for general simplex communication: 9, 10, 12-21, 23-30, 39.